


TracVision® R4/R5/R4SL/R5SL ExpressVu Configuration Steps

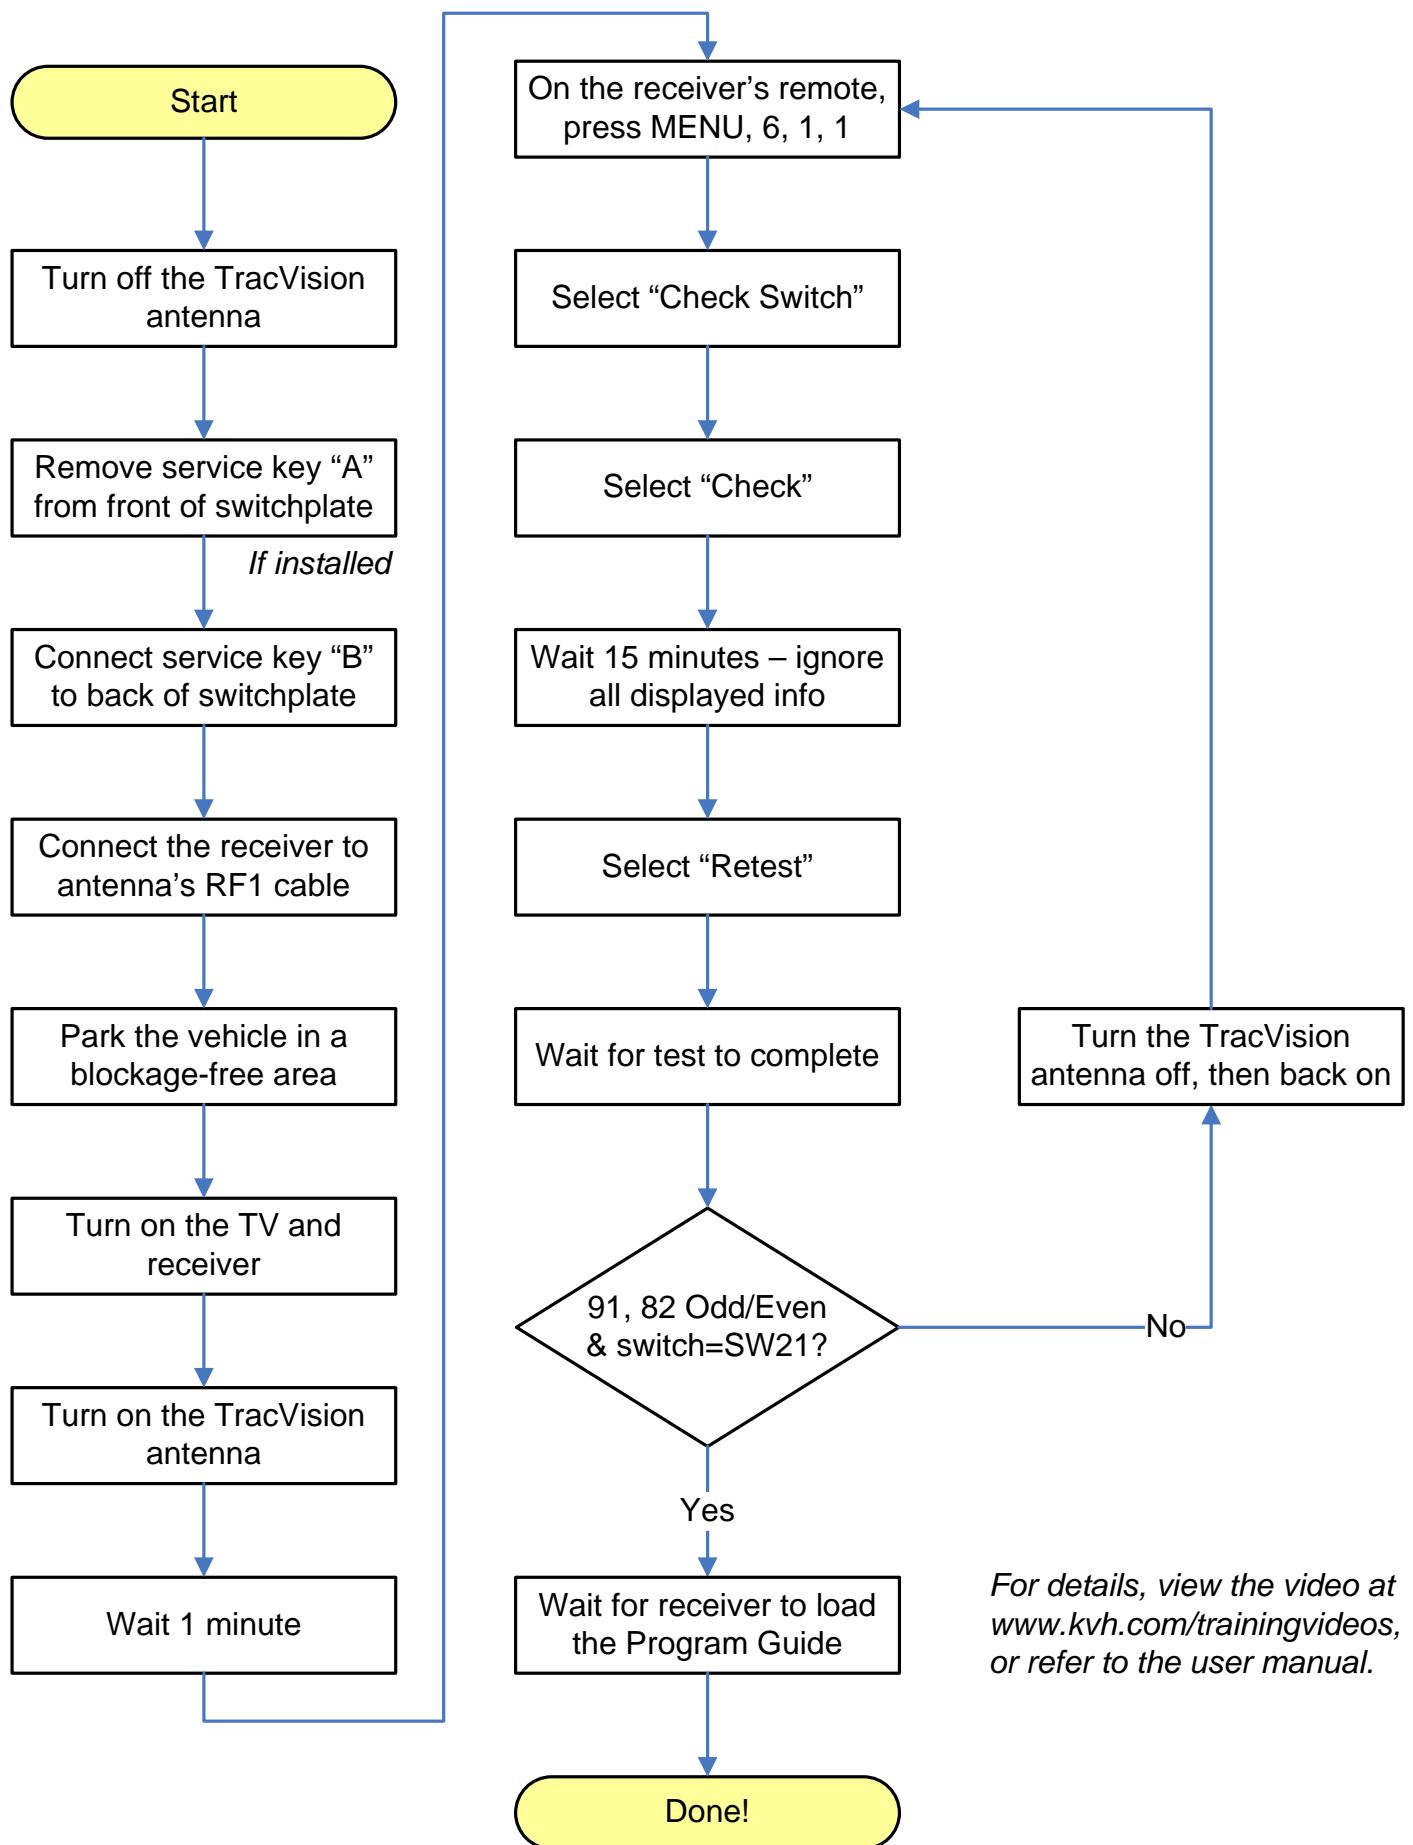

For details, view the video at www.kvh.com/trainingvideos, or refer to the user manual.